


Footswitch Assembly (Programmable)

SECTION VI PARTS LIST

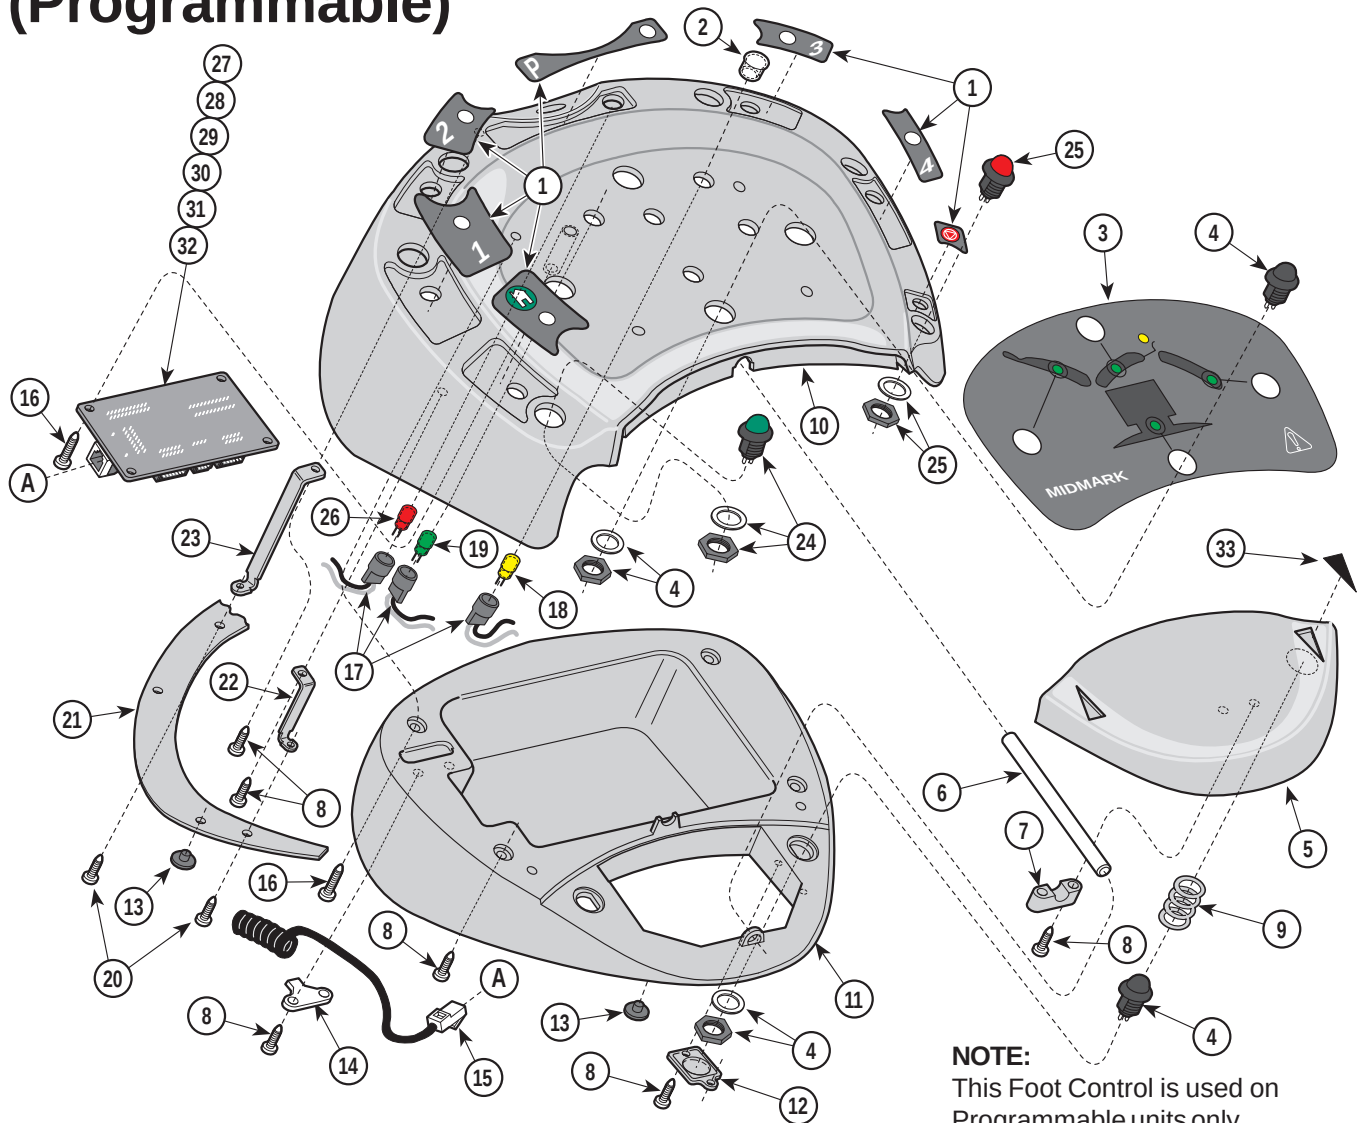

NOTE:
This Foot Control is used on
Programmable units only.

MA433000

Item	Part No.	Description	Req.	Item	Part No.	Description	Req.
	9A236001	4 Position Footswitch-Programmable (Includes Items 1 and 33)	1		• 015-1218-01	• Conxrite Connector Assy [8" Leads] ...	4
1	• 061-0674-00	• Footswitch Decal set	1	18	• 015-1235-01	• Yellow LED	1
2	• 015-1211-00	• Conxrite Lens	11	19	• 015-1235-00	• Green LED	9
3	• 061-0673-00	• Foot Switch Label	1	20	• 040-0006-76	• Screw	4
4	• 015-1230-02	• Switch-Black [7" Leads] (Incl. Nut)	11	21	• 050-4077-00	• Bottom Cover	1
	• • 015-1205-03	• • Push Button Replacement Black Cap	1	22	• 050-4075-00	• Side Bracket	2
5	• 053-0918-00	• Foot Control Pedal	1	23	• 050-4076-00	• L.H. Front Bracket (Shown)	1
6	• 057-0468-00	• Pivot Shaft	1		• 050-4076-01	• R.H. Front Bracket (Not Shown)	1
7	• 053-0921-00	• Pedal Cap	2	24	• 015-1230-04	• Switch-Green [5" leads] (Incl. Nut)	1
8	• 042-0168-00	• Screw	16		• • 015-1205-05	• • Push Button Replacement Green Cap	1
9	• 025-0054-01	• Compression Spring	2	25	• 015-1230-03	• Switch-Red [5" leads] (Incl. Nut)	1
10	• 053-0920-00	• Programmable Foot Control Top	1		• • 015-1205-04	• • Push Button Replacement Red Cap ..	1
11	• 053-0917-00	• Foot Control Base	1		• Red LED	1	
12	• 053-0940-00	• Switch Cover	2	27	• 015-1168-02	• Programmable Foot Control PC Board .	1
13	• 057-0947-00	• Stem Bumper	13	28	• 015-0865-01	• 10 Position Connector (Not Shown)	1
14	• 050-4028-00	• Strain Relief Bracket	1	29	• 015-0865-02	• 12 Position Connector (Not Shown)	1
15	• 015-0839-00	• Cord Set	1	30	• 015-0865-03	• 24 Position Connector (Not Shown)	1
16	• 040-0168-01	• Screw	6	31	• 015-1231-00	• 4 Position Recept. Hsg. (Not Shown) ..	1
17	• 015-1218-00	• Conxrite Connector Assy [4" Leads] ...	7	32	• 015-0013-02	• Cable Tie (Not Shown)	1
				33	• 061-0716-00	• Up / Down Arrow Label	2

Always Specify Model & Serial Number